


REMOVE FUEL LINE FROM HONDA PUMP
 CONNECT 5/16"(4') HOSE (SUPPLIED) TO HONDA FUEL PUMP OUTLET TUBE
 CONNECT OTHER END OF 5/16" (4') HOSE TO BOTTOM REAR FITTING ON FUEL SWITCH VALVE

CONNECT OTHER 5/16" (3') HOSE TO HONDA FUEL LINE WITH FUEL LINE COUPLER
 CONNECT OTHER END OF 5/16"(3') HOSE TO FORWARD FACING FITTING ON FUEL SWITCH VALVE

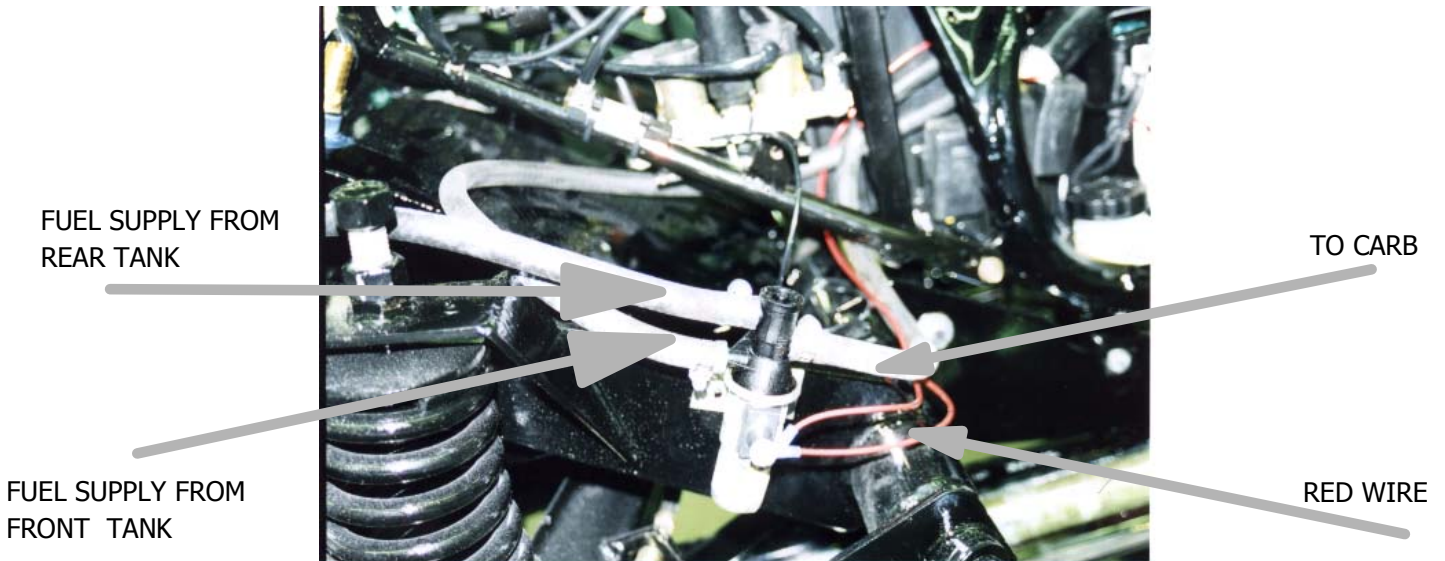

RED WIRE FROM TOGGLE SWITCH TO CONNECTOR ON FUEL SWITCH VALVE